


Squaring a Metered Corner



For some projects, like the metered box shown below, a band clamp is the easiest way to hold the project together while the glue dries. But there is one small problem. The metered corners tend to slip out of alignment as the clamp is tightened. So in addition to the band clamp, I clamp short pieces of aluminium angle bracket to the inside of each corner to draw the mitre together. As you can see in the detail, filing a slight round over on the outside corner of the bracket provides room for glue squeeze-out.

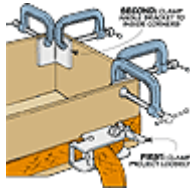