


WILDLIFE MANTLE SCONCE BILL OF MATERIAL			
ITEM	QTY	SIZE	USE
A	1	1/2" X 4-3/4" X 4-3/4"	TOP
B	1	1/2" X 4-3/4" X 4-3/4"	BASE
C+	1	1/4" X 4-1/4" X 7-3/4"	FRONT PANEL
D	1	1/4" X 4-1/4" X 7-3/4"	BACK PANEL
E	2	1/4" X 3-3/4" X 7-3/4"	SIDE
F	1	1/8" X 3-3/4" X 7-1/2"	PLEXIGLASS
G*	1	4 WATT BULB, SOCKET AND CORD (#LTKIT)	LIGHT ASSEMBLY

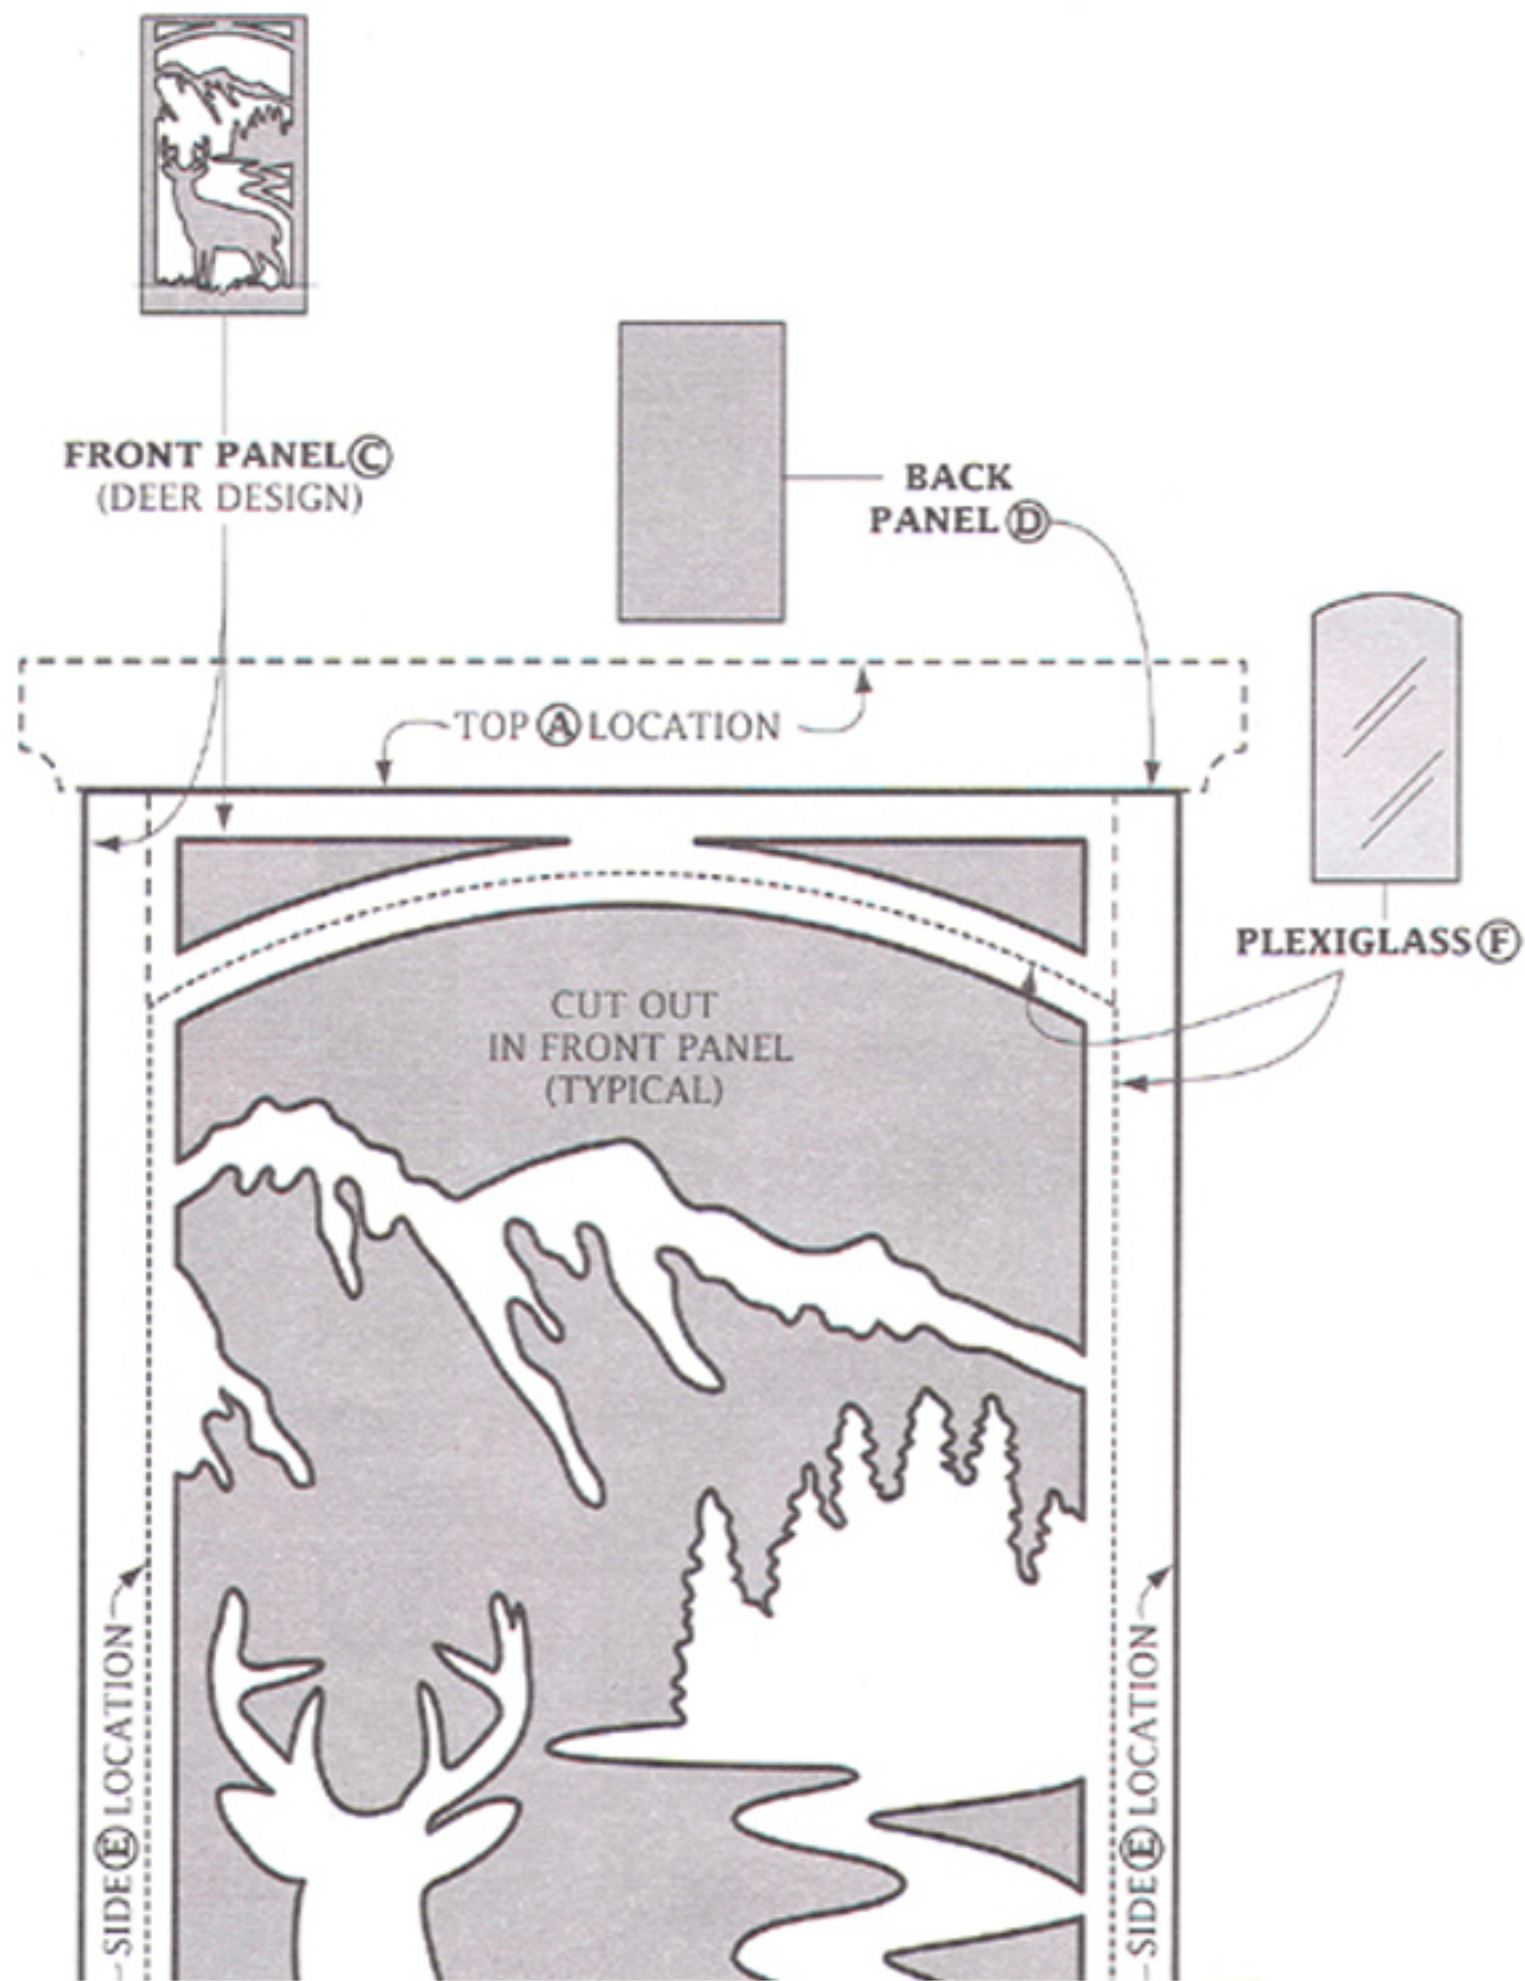

WILDLIFE MANTLE SCONCE

Cut pieces sizes stated in BILL OF MATERIAL from hardwood of your choice. Make all appropriate cut outs using desired design. Rout Top A and Base B as noted. Drill hole in Base B as noted. Paint all pieces Black or stain color of your choice prior to assembly. Center and glue Plexiglass F to backside of Front Panel C as shown keeping

bottom edges flush. Glue Sides E between Front Panel C and Back Panel D as show, keeping top, bottom and outside edges flush. Center and glue Top A and Base B to Assembly as shown. Install Light Assembly* (#LTKIT) in hole drilled in Base B. Place on Mantle or shelf to display.

*Available from Scroller Ltd.
1-800-486-6053