



[home](#)
 How to: [Cut dovetails](#) | [Make jigs](#) | [Use Saw-Aid™](#) | [Use wall-saver™](#) | [Update User's Manual](#) | [Register Products](#) |
 Shop: [Purchase Products](#) |
 Sharing: [Testimonials](#) | [Links](#) | [Feedback](#) | [Product Reviews](#) | [FAQ](#) | [Compare Products](#) | [Gallery](#) | [Plans-Jigs-Tips](#) |
 Products: [Saw-Aid™](#) | [TemplateMaster™](#) | [wall-saver™](#) | [Router bits](#) | [Videos](#) | [DustSucker&More!™](#)

**Easiest-to-use, most versatile,
and least expensive dovetail
jigs in the World! GUARANTEED.**



Sticky Blocks (Bench Top Savers)

Sticky blocks hold your wood 3/4+ inches above the workbench to prevent damaging the workbench when cutting or routing.

Place a 1/2" thick scrap between the work and the bench when drilling to keep from drilling into your work bench.

The non-slip pads on the top and bottom keep the work secure as you work. They also hold your work piece in place as you sand



The blocks are as simple to make as they are useful to use.

Just cut scrap 3/4 inch thick wood or mdf blocks to the size you want. I cut mine 4 inches square






Then cut the non-slip mat and glue the mat to both sides of the blocks. I used carpet underlayment called Rug Stay. You can use a router pad but it will cost much more and really not work any better.

Cut the pad slightly smaller than your block. Spray glue (I used 3M) on both the pad and the block, count to 10 to allow the glue to get tacky ,and place the pads on both sides of the blocks.

Rub the pads down to insure contact

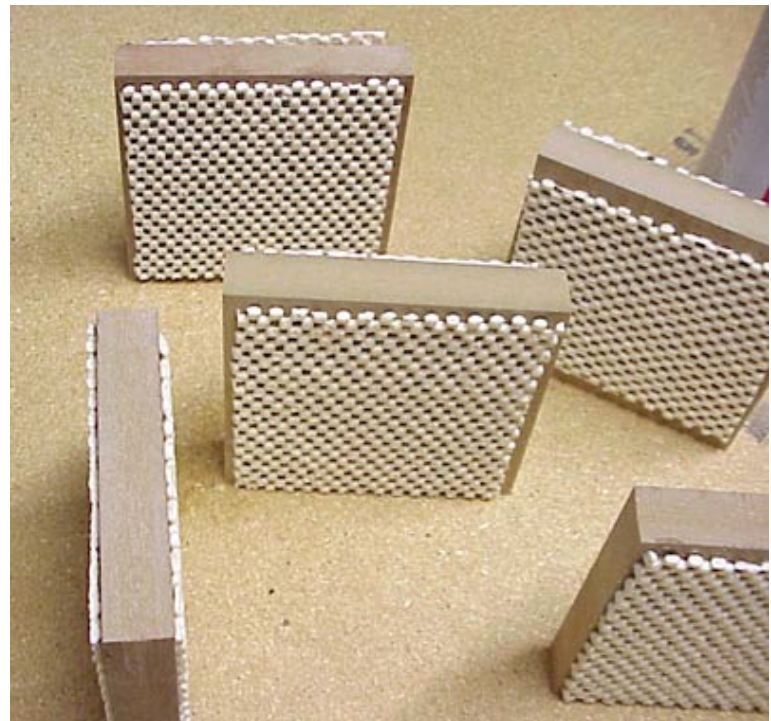

Make as many as you want. I recommend at least 6 sticky blocks.

I hope you find them as useful as I do.

[back to plans/jigs/tips](#)

[home](#)

My lawyers,
probably
with good
reason,
insist on the
following: ©
2000 - 2004
Stots
Corporation .
PO Box
257 .
Harrods
Creek, KY
40027. All
rights
reserved.
Trademarks
are owned
by Stots
Corporation .
[Terms &
Conditions](#) |
[Privacy
Policy](#) |
[User
Agreement](#)