## Easy Wood Plans

www.easywoodplans.com

#7B, 2316-27Ave N.E. Calgary, Alberta Canada, T2E 7A7

Read all directions before beginning Corpenters Glue should be used to


force all joints all nails, countersink all screws

# DRILL DEPTH GAUGE ILLUSTRATION 1

### Make a depth gauge for your drill — by drilling through a 3/4" piece of wood 1 and place over drill bit





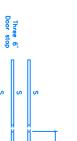





2

0


One 1 "x6" x8"

A

GRAIN -




2) Loy out both pieces A and mark holes as shown (Fig 3). Using the drill guide, (Illustration 1) drill the twenty eight 1/4 holes to a depth of 1/2: Mark the positions of W. X. and P. remembering not to cover up the robbet in A. Pre-drill with a 1/8" bit and glue and screw on these pieces with twenty four 1/4" ## Flathead screws, six for each W. and three each for X and P. Glue and noil 1 to front of C flush with top X with 1 1/2" finishing noils, noiling through B. Stand the two A pieces an their front edge, glue and noil in the CJ assembly with 1 1/4" inset on the reor of the pieces and noil in the CJ assembly with 1 1/4" inset on the reor of the pieces is free and that C is flush with the tops and fronts of pieces P. Place the BH assembly on top at piece P. glue and noil to pieces B with 1 1/2" finishing noils. Repeat to glue and noil the other two pieces B to pieces W using 1 1/2" noils, noiling through the pieces B into the top and bottom of the pieces W. Loy a bead of glue in the insets of pieces A and place in piece I. Noil on piece I by the standard of the pieces W. Loy a bead of glue in the insets of pieces A and place in piece I. Noil on piece I by

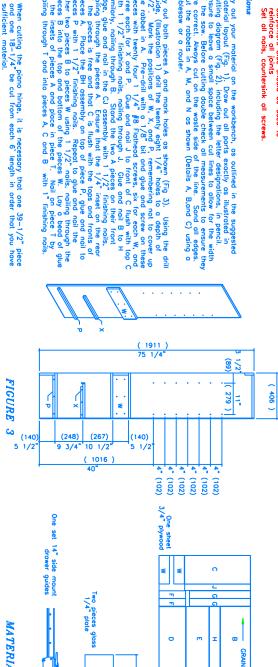

0

One sheet 3/4" plywood

0

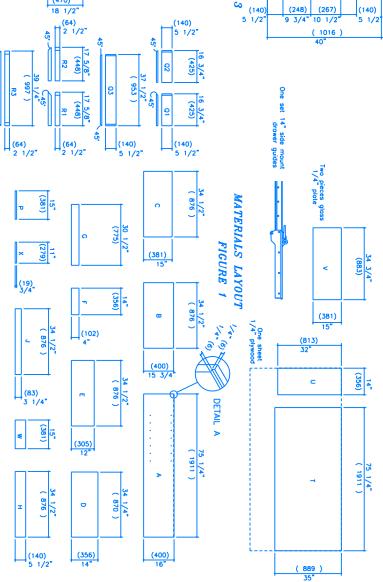

# Easy Wood Plans

(1110)

(873)

(137) 5 3/8

17 1/8° (435)

(38) 1 1/

CUTTING DIAGRAM

FIGURE 2

CHINA CABINET - Project #103

MATERIALS LIST

\* Two 4'x8' sheets 3/4" Plywood, G2S (ACA)
\* One 4'x8' sheet 1/4" Plywood, G2S (ACA)
\* One 8' 1x6 (3/4"x5 1/2"x8')
\* One 5' 1x6 (3/4"x5 1/2"x5') base moulding
\* One 6' 1x6 (3/4"x5 1/2"x5') base moulding
\* One 7' Crown Moulding (1-5/8"x2 1/2"x7')
\* Three 6' door stop (1-1/4"x3/8"x6')

WATERIALS LIST

Sixteen 1/4" wood plugs
I wo pieces 1/4"x34-3/4"x15" plate glass
Sixteen screen door clips
One set of 14" side mount drower guides & hardware
I wo 6 lengths of 1-1/2" plana hinge c/w fasteners
Four Cupboard door pulls & one matching Drower Pull
Four magnetic door latches with fasteners

\* Sixteen shelf brockets (1/4" dia.)

24 fluorescent light fixture (optional)

Forty feet of 3/4 iron-on edgelabe

Approx. 1/2 lb. 1-1/2" finishing nails

Approx. 11/2 lb. 1" finishing nails

Approx. 11/2 lb. 1" finishing nails

Approx. Ity #8 1-1/4" flathead screws

Approx. twenty five #8 2-1/2" flathead screws

MATERIALS LIST

Stain & varnishSandpaperWood fillerCarpenters Glue ٩

MATERIALS LIST