ocedure 2) - See Figure 3

Stort the project by building the seot assembly first, Follow the step by step procedure as outlined in Figure 3. If you are using soft wood such as cedure or redward, and drived screes, you should not have to pre-drill the wood, however, the use of fir may require pre-drilling. If so, then a 5/64 drill will work for drywall screes, or use a 3/32 for \$8 screes, and 7/64 for \$10 screes.


TIP: The use of a 'C' clamp will help in holding the pieces of wood logether when inserting the screes. This assures the proper location is maintained and a tight fitting joint will result.


In step §1. & 2. keep all pieces flush to the top and front sides, in step §3. & 4. It is step the scale pieces (with one 1 - 1/2" screw at acching the step §5. (siten the completed seet back to the base frame with only one 1 - 1/2" screw in each side (only one screw will allow you to adjust the angle to match the position of the ormal step in the step seed to make the position of the step seed to the step seed

cedure 3) - See Figure 4

le loid out in step #6, attach the arm rests £ & F to the loop of the legs peces H. Mote sure to reverse £ & F so you have a #1 and right assembly. The addition of a temporary brace in step #7 may assist in attaching the leg assembly to the seat base. Once the orm rests are fostered, the legs may be fostered to the seat base. Since you have a few of 2-1/2 screws for each leg, driven in a from the outside face of H. Since you only installed one screw in the top the seat back will rotate slightly so that you may olign the seat back will rotate slightly so that you may olign the property of the seat back will rotate slightly so that you may olign the property of the seat back will rotate slightly so that you may olign the property of the seat back will rotate slightly so that you may olign the property of the seat back will rotate slightly so that you may olign the property of the back.

you howen't done so, now you are ready to all or stain the roject. First make sure the seats and arms are sanded smooth so our friends don't go home with a sliver where they don't want ne. Happy sunning — we hape you enjoy your project.

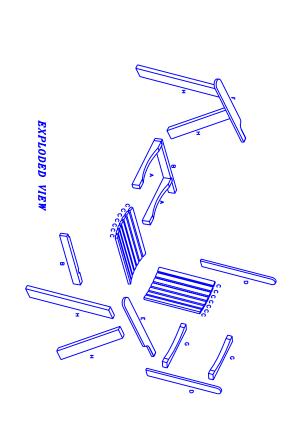

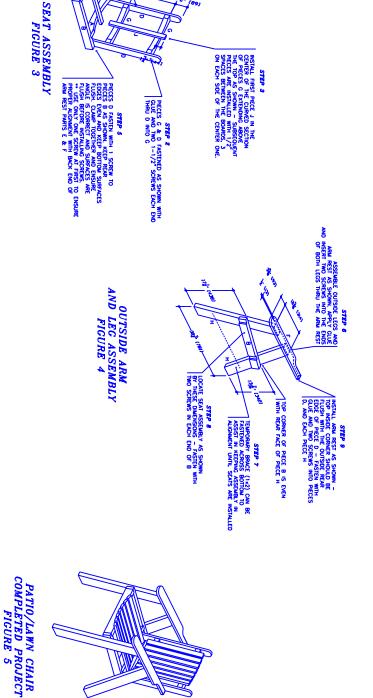

PIECES A INSTALLED INTO PIECES

B - KEEP TOP SURFACES

FLUSH - GLUE AND FASTEN WITH

TWO 2 1/2" SCREWS IN EACH END